

# **KAREL`TM142**

**ANALOG PHONE**

## **USER GUIDE**

# **KAREL`**

<http://www.karel-electronics.com>



TM142

## CONTENTS

PARTS CHECKLIST:.....	1
INSTALLATION:.....	1
TELEPHONE KEYS:.....	3
TELEPHONE CONFIGURATION:.....	4
PHONE OPERATION:.....	5
SAFETY INSTRUCTIONS:.....	7
APPENDIX:.....	8

## PARTS CHECKLIST

- 1 base
- 1 line cord
- 1 handset
- 1 handset cord
- 1 user manual

## INSTALLATION

 
Installing the phone

1. Connecting the handset.
2. Connecting the telephone line.




### Wall mounting:

1. Rotate the wall mounting knob as shown in the following illustration:

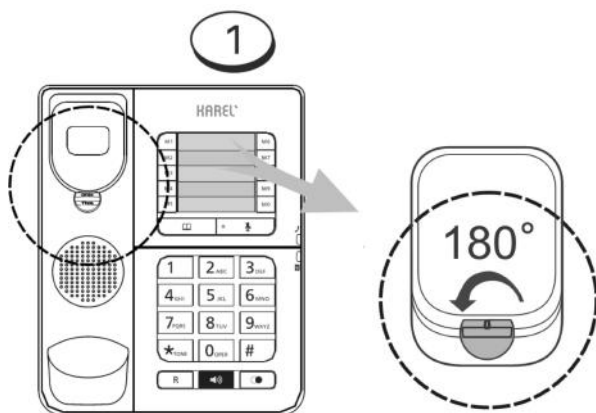

# KAREL™ TM142
 
## Wall mounting knob

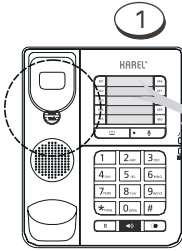


Location

 
 


Rotate 180°




The knob is designed to keep the unit in place when the telephone is mounted on the wall.

2. Install the base unit on the wall and then plug one end of the line cord into the telephone connection socket and the other end into the modular telephone line Jack marked 
3. Attach the telephone at the wall as shown in the following figure.

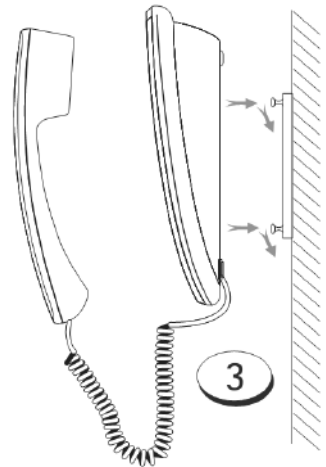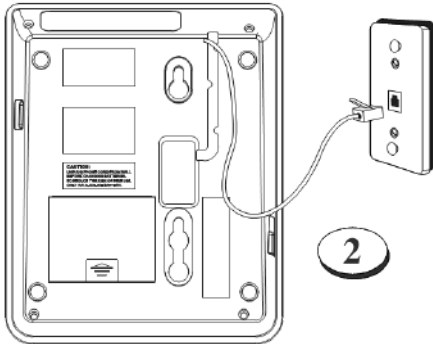

# TELEPHONE KEYS

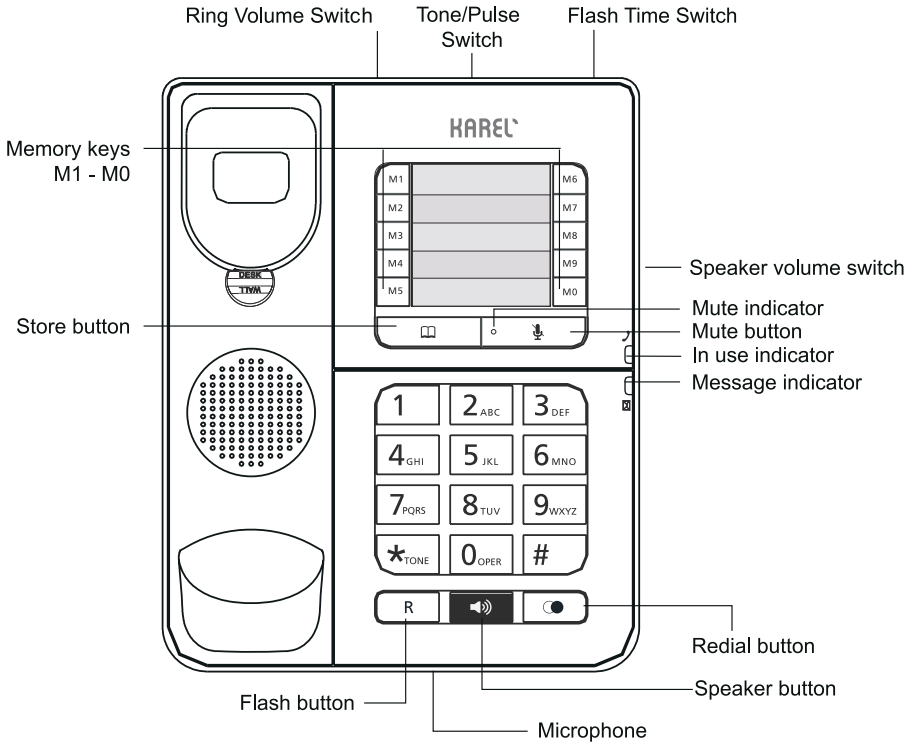 

## TELEPHONE CONFIGURATION

**Note:** Immediately change the following factory settings.

### Speaker volume level adjustment:

You can adjust the speaker volume level to high, middle, low using the switch on the right side of your telephone.

### Ringer volume level:

 
The phone will ring when there is an incoming call. You can set the ringer volume to high, middle or low level. The ringer volume switch is indicated in the following illustration under A.

### Pulse tone setting:

You can select P (PULSE) or T(TONE) dialing mode according to the requirements from the local telephone operator. The T/P switch is indicated in the following illustration under B.

### Flash time setting:


You can use the Flash feature to access services provided by your telephone operator. The Flash time is dependent on the local telephone exchange. You can change the setting using the switch indicated in the following illustration under C.

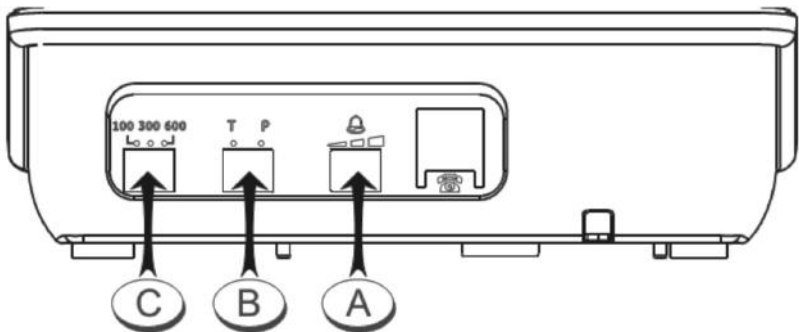


- A - Ringer Volume Switch
- B - Tone/Pulse Switch
- C - Flash Time Switch

# PHONE OPERATION

 
## Receiving a phone call

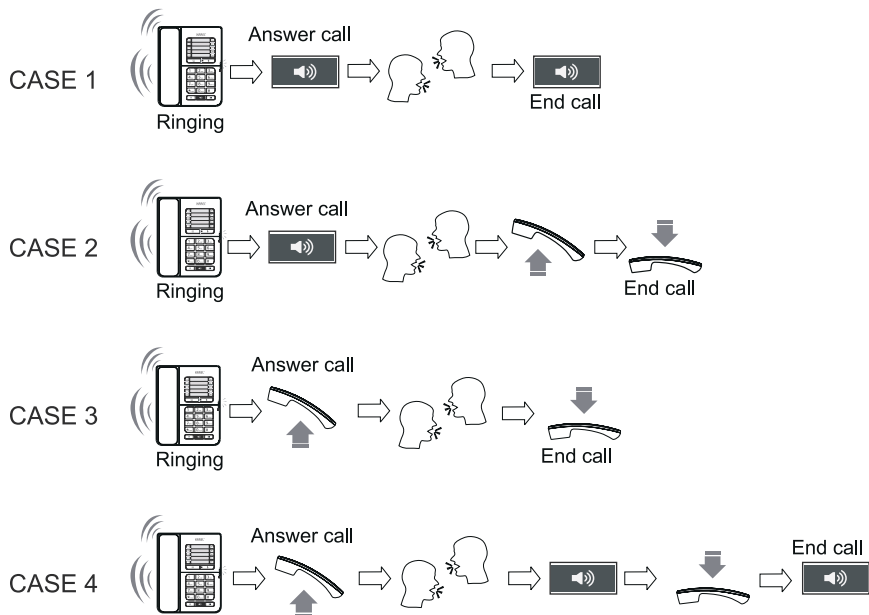

## Making a phone call

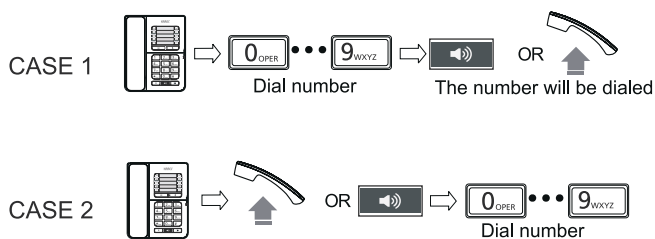 

 


## Redial






## Mute:

 
In off-hook state, the user can press the  button to activate the mute function.

When  (MUTE) is on, the MUTE  symbol will appear on the screen. Press the button to deactivate the mute function and resume normal conversation.

## Access telephone operator services:

During conversation, press  button to interrupt momentarily the telephone conversation and to access your telephone operator's services.

## Storing / editing a telephone number:

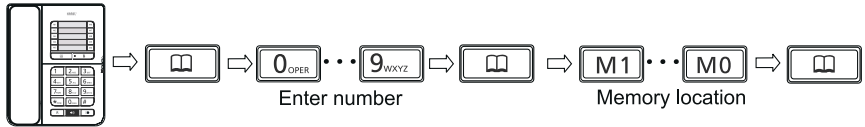

## Dialing a memory location:



## SAFETY INSTRUCTIONS

**Please observe the following instructions:**

- Place the phone at the appropriate distance:
  - from sources of heat,
  - from direct sunlight,
  - from other electrical appliances.
- Protect your phone from damp, dust, aggressive liquids and steam.
- Connect the cables only using the sockets provided.
- Connect only approved accessories.
- To clean the phone, use only a slightly damp cloth.
- Do not use your phone in damp rooms (for example, in the bath).

**Care:**

Your telephone is a sophisticated product in terms of design and construction, and should therefore be handled with care.

To clean the telephone, wipe first with an antistatic cloth or a damp, soft leather cloth and then dry using a dry cloth.

**Recycling (environmental protection):**

At the end of the product's life cycle, the telephone must not be disposed of in normal domestic waste. Please take it to a collection point for processing electrical and electronic equipment: see symbol on the product, in the user manual and/or packaging. Some materials used in this product can be recycled if you take it to a recycling depot. By recycling parts or raw materials from used products you will be making an important contribution to environmental protection. Please contact your local authority if you require information about collection points in your neighbourhood.

**Warranty conditions:**

Your telephone is subject to a guarantee from the date of purchase in accordance with the legal provisions of the country in which the telephone was purchased. As evidence of the date of purchase, please keep the receipt or the warranty card completed by the retailer. All defects attributable to material and manufacturing faults will be corrected free of charge within the warranty period, either by repairing or replacing the defective equipment.

The warranty does not cover expendable materials, defects which affect the value or use of the equipment only insignificantly, and damage caused by incorrect use, ordinary wear and tear, or manipulation by third parties.

This warranty does not cover consequential damage caused by the use, failure or defectiveness of the product. In particular, no liability whatsoever is accepted for damage to property and pecuniary loss.

To claim under this warranty, please contact the retailer where you purchased your telephone.

### **Approval and conformity:**

This corded analog telephone complies with the basic requirements contained in the R&TTE Directive 1999/5/EC on radio equipment and telecommunications terminal equipment and is suitable for connection and operation in the member state indicated on the base station and/or packaging.

 The CE symbol confirms the conformity of the telephone with the above directive.